



## 102028 In-Line Mounting Gland Stainless Steel High Temperature/High Pressure INSTALLATION INSTRUCTIONS

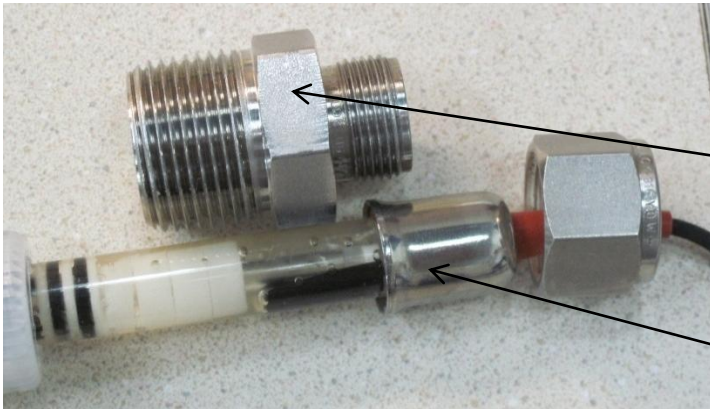

1) \*Lubricate and install the 2 o-rings inside of the gland.

2) While the piping system is under no pressure, install the gland into a 3/4" NPT tee fitting.

3) Use Walchem high pressure pH and ORP electrodes, p/n's 102029 and 102963, which includes this stainless steel flanged cap.

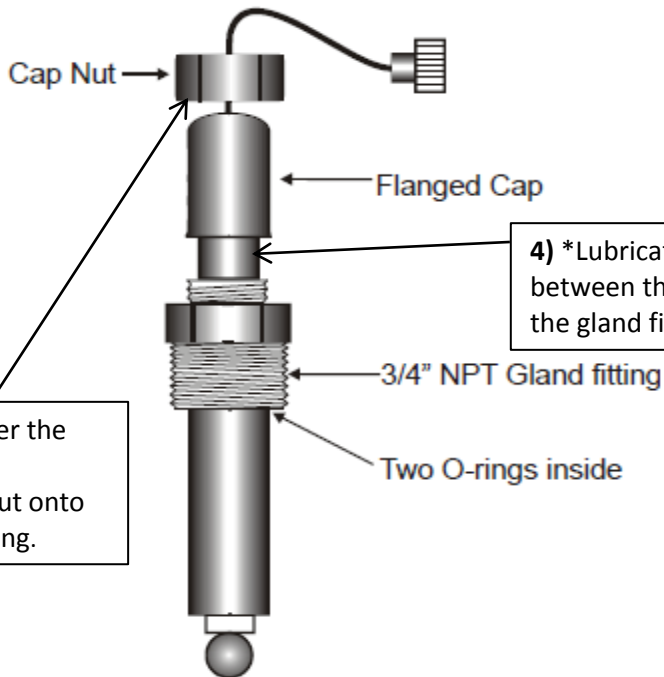

4) \*Lubricate and install the FKM o-ring between the flanged cap and the top of the gland fitting.

5) Install the cap nut over the top of the flanged cap. HAND tighten the cap nut onto the top of the gland fitting.

\* O-ring lubricant should be a petroleum based grease.

